

TROUBLESHOOTING:

—

□

×

HAMMER SHAVER

PROBLEM	POSSIBLE REASON	SOLUTION
The machine won't turn on	Battery is drained or internal circuit is faulty	Connect to power source to charge, return to after-sales service for repair
Shaving effect is poor	Too much hair residue in the blade unit or blade unit is worn out	Clean the blade unit thoroughly, purchase a new YS-2 blade unit
Cannot be charged	The charging port is not properly connected or the charging cable is damaged	Replace the charging cable or return to after-sales service for repair
Short battery life	Battery malfunction	Return to after-sales service for repair
Skin allergy after shaving	Your skin needs some time to adapt to the shaver	2-3 weeks of adaptation, the symptoms will disappear

CLASSIC MEMORIES

BASIC

HAMMER SHAVER

MTNI

KOMINGDON

Ys-2

FULL ALLOY SHAVER

PREMIUM GIFTS

YS-2

ELECTRIC SHAVER

Unique Style

Double Rotational Magnetic Floating Blade

Type-C Fast Charge

Waterproof, Full Body Washable

01

02

03

04

PRODUCT INTRODUCTION

Thank you for using YS-2 Electric Shaver. Please read this manual first before using the product.

CHARGING PORT

SHAVER BLADES

ON/OFF SWITCH

MAIN BODY

LED INDICATOR LIGHT

1

2

3

4

5

HAMMER SHAVER

YS-2

HAMMER SHAVER

YS-2

HAMMER SHAVER

INCLUDED IN THIS PRODUCT

TYPE C CHARGING CABLE

SHAVER BODY

CLEANING BRUSH

01

02

03

PRODUCT SPECIFICATIONS

Model no: YS-2

Brand: Komingdon

Colour: Chrome Silver

Rated Power: 8W

Charging Input: 5V = 1A

Charging Time: 180 mins

Battery Capacity: 900 mAh

SAFETY PRECAUTIONS:

Danger

Product contain built-in battery, please do not throw it into burning flame or acidic compound.

Warning

1. Please do not plug/unplug USB charging cable with wet hands to prevent electric shock. Do not wash the product while charging.
2. Do not exchange the built-in battery by dismantling this product.

CLASSIC MEMORIES

HAMMER SHAVER

CAUTION

1. Please check if the product is complete before using it. If you find any cracks or deformation, please do not use it.
2. Please do not knock or drop this product. If the product is damaged or abnormal due to collision or falling, please stop using it immediately. If necessary, please send it to our after-sales service for repair.
3. People with physical disabilities, mental disorders, or lack of relevant experience and knowledge (including children) must be supervised and guided by a guardian when using it.
4. It is recommended to charge and store in a dry environment of 5°C-35°C. Do not store this product in direct sunlight or other heat sources.
5. Use 5V specification for the charging USB interface. During charging, do not pull the USB power cord forcefully.
6. The machine will generate slight heat during charging, which is a normal phenomenon. Please feel free to use it.
7. Please keep away from strong electromagnetic fields during charging, such as an electric induction cooker in use.
8. Do not clean this product with hot water above 60°C, salt water, thinner, gasoline, alcohol or other chemical products.
9. Please do not press the rotating blade net with your hand. Please do not trim the beard with wounds.
10. The razor is a personal care product. Please do not share it with others, otherwise it may cause skin allergies.
11. This product can be washed with water for a short time, but it cannot be soaked in water for a long time.

HOW TO USE INSTRUCTIONS

1. Take out the product from the box, turn on the switch, the blade starts to rotate, and the indicator light is blue.
2. Gently attach the blade part to the skin surface with beard and move it back and forth.
3. After shaving is completed, press the switch to turn off the machine, and the indicator light will turn off.

CHARGING INSTRUCTIONS

1. When the indicator light flashes red, it means it needs charging. Connect a 5V-1A charging cable to charge. During charging, the indicator light flashes blue. When fully charged, the blue light stays on.
2. It is recommended to use the USB charging cable included in the product packaging.
3. Keep the product dry during charging.
4. This product has plug and play function. A full charge takes about 180 minutes.

CLEANING PRODUCTS

1. This product uses magnetic suction head. When cleaning, you can directly remove the blade assembly from the top by gently pulling it.
2. Use a brush to clean the inside of the machine. You can use normal water pressure to wash the blade head.
3. After cleaning is completed, wipe dry the water drops and install the blade head.

HAMMER SHAVER

REPLACING THE BLADE NET

1. If you find that the shaving effect has decreased significantly, you can purchase genuine blade net parts to replace.
2. Please dispose of the discarded blade net parts in recyclable waste bins for recycling.

ENVIRONMENTAL INFORMATION

This product contains below substances but is well below the safety standard requirement.
Lead(Pb) Mercury(Hg) Cadmium(Cd) Hexavalent Chromium(CR(VI)) Polybrominated Biphenyls(PBB) Polybrominated Diphenyl Ethers(PBDE)

ENVIRONMENTAL PROTECTION

When this product reaches the end of its service life, before discarding it, be sure to recycle the batteries inside and hand over the product to the designated recycling center for treatment.

10

Batteries can only be removed when discarding this product.
10 The number in this symbol indicates that the product's environmental service life under normal use conditions is 10 years.

mynt

REGISTER E-WARRANTY in 4 SIMPLE STEPS

Please register your warranty online

SCAN ME

Scan QR Code or log in to <https://www.mynt.com/my/e-warranty.html>

01

Register Product Warranty

02

Attach Product Invoice

03

Receive Confirmation Email

04